

# WIRELESS KEYPAD - Installation / User Manual

Code: KPD-NO-WIRE-KG-2

Short Version instruction


## **Features:**

- ✓ Up to three different user pin-codes
- ✓ Push button optional button
- ✓ Wireless – no wires required
- ✓ Powered by standard AAA batteries, included
- ✓ Specifically designed for the KingGates motors

## **Before programming the keypad - unit**

- fit in the batteries
  - programming, and check reception, prior to the mounting of the unit
  - metal surface may reduce the reception range
  - using the unit is by keying 4 numbers followed by one of the dotted buttons A, or B, or C (see picture above)
  - technical knowledge needed for programming this unit
- 
- pin-codes are similar: to 1,2,3,4, **B** or 6,5,8,6, **A** etc, - see above picture
  - three (3) different user pin-codes can be set
  - the **D** key is reserved for the Push Button option- DO NOT PROGRAM THIS BUTTON TO THE MOTOR UNLESS YOU NEED THIS OPTION.
  - no need to delete old code; When entering new code - old code will be deleted
  - you need to go into programing mode first, and then, to program a user pin-code
  - for security reason do not use 1234, 1111, or other simple codes

**D** Button  
Optional  
PUSH BUTTON

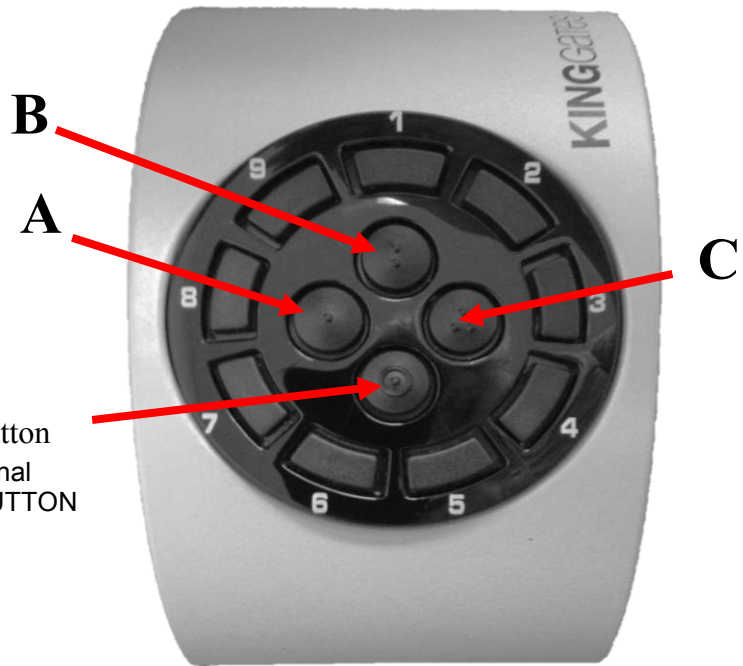

## **Programming a user pin-code(s) to the unit**

- 1) press buttons A and B together for 6 seconds until you hear - three consecutive beeps
- 2) press 1,1,1,1, (the default Master Code), followed by the **D** button - three consecutive beeps
- 3) key-in new user pin-code: 4 numbers, followed by one of the button A or B or C - one long beep confirms the code has been stored
- 4) Try the new pin-code; if ok - One confirmation long beep, (if not successful -consecutive short beeps will be heard, repeat steps 1 - 4)

## **Programming the keypad to a King motor/ control box / your gate:**

In the motor or the control box:

- 1) press the **RAD** button- the red RAD indicator become steady on and release the button immediately.  
If it starts flashing – wait until it goes off, and repeat it again
- 2) on the keypad; Key-in the new user pin-code you just enter (Eg:1,2,3,4, B) - red RAD indicator on the control unit flashes
- 3) key-in the other user pin-code if done - RAD indicator on the control unit flashes
- 4) repeat for more user pin-codes if need to (A, B, C)
- 5) wait few seconds until the **RAD** indicator turned off

## **Programming the keypad to a KingGates FRED receiver:**

- 1) press the tact switch on the RECIVER shortly - green light turns ON
- 2) key-in the user pin-code you just enter (Eg:1,2,3,4, B) - Green light OFF
- 3) repeat section 1 and 2 for more pin-codes if need to (A, B, C)

## **Setting the keypad as a Push Button:**

- 1) press the **RAD** button on the motor/ control unit.  
as the red RAD indicator turns on – release the button immediately. If it starts flashing – wait until it goes off, and repeat it again
- 2) press the **D** key on the keypad - the RAD indicator flashes while the code is memorized.
- 3) wait few seconds until the Red RAD indicator turns off – done

### Changing the Programming Code:

**IMPORTANT:** loosing programming code will block the unit, do not change the programming code unless you are fully understanding the procedure and you are pencilling it, and keeping it in a safe and secure place

- |   |                           |
|---|---------------------------|
| 1) press the <b>A</b> and <b>C</b> buttons together for 6 seconds               | - Three consecutive beeps |
| 2) key-in the existing programming code (1111 by default) followed by the D key | - Three consecutive beeps |
| 3) key-in your new Programming code followed by the <b>D</b> key                | - Three consecutive beeps |
| 4) key-in the new programming code again, followed by the D key                 | - Three consecutive beeps |

### Mounting the keypad

Programme the unit prior to the installation of it  
Do not mount the unit horizontally allowed for Australia  
Make sure to have a seal on the back part of the keypad

- 1) Separate the back part of the unit



### REPLACING THE BATTERIES

1. Insert a screw-driver into the holes on the side of the unit to take the black plastic sides out.
2. Open the 4 screws of the front metal part
3. Open the 4 screws on the corners,
4. Replace the batteries and close back the unit



Seal around the unit

The **UP** sign for installation direction

Front part

back mounting part

- 2) Follow the "UP" mark on the back plate; fit it vertically to the wall / post
- 3) Make sure that the foam -seal is in place
- 4) Put the keypad back together



**Australia:**

**Allegro Gate Automation Pty. Ltd.**



[www.allegrogateautomation.com.au](http://www.allegrogateautomation.com.au)

**KINGGates**



**KingGates – S.R.L**

Via A. Malignani, 42 - 33077 Sacile (PN) ITALY

Tel. +39 0434 737082 - Fax +39 0434 783382 E-mail: [info@king-gates.com](mailto:info@king-gates.com) web: [www.king-gates.com](http://www.king-gates.com)